

**Items Supplied >**

- 1 – Assembled Lightbar
- 2 – Bolt, M8 x 16 mm
- 3 – Cable Ties 4" Black 18# Test
- 1 – Wire Quick Splice Connector
- 2 – Terminals, 16 gage Crimp
- 1 – Wire 18 gage Black 20" Length

**Application(s) >**

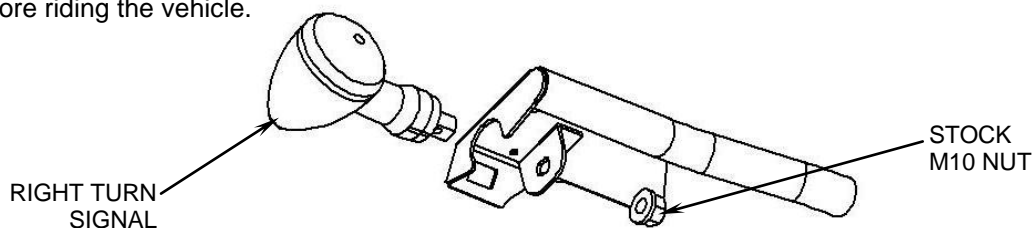
SUZUKI BOULEVARD C50 07-14

**Instruction Manual >****04-0327**

Page 1 of 1

**Read all instructions carefully before installing your new Cobra product!**

1. Remove (2) Phillips head screws from headlight and set aside. Remove headlight from housing, unplug and set aside.
2. Unplug turn signals inside headlight housing. Remove M6 allen screw from the bottom center of the plastic cover on turn signal bar. Remove (2) M8 bolts from the turn signal bar on the front of the triple clamp. These will not be reused. Remove M10 nuts and turn signals from light bar. Keep left and right separate. Place your new Cobra light bar on a protective surface and install the left turn signal with the M10 nut as shown in Figure 1. Repeat on right side.
3. Install your new Cobra lightbar to the triple clamp and insert supplied M8 bolts. Align the light bar and tighten bolts to factory specifications.
4. Route turn signal wires through back of headlight housing and reconnect in their original configuration.
5. Route the left spotlight wire under the lightbar towards the lightbar switch, take the right spotlight wire and twist together with the left one. Insert the two (twisted together) wires into the supplied push on terminal and crimp with a crimping tool. Connect this to one of the poles on the lightbar switch, it does not matter which one.
6. Connect the 20" power wire to the remaining pole on the lightbar switch. Route the power wire through the back of the headlight housing. Loosely pull slack out of wire and using the 3 supplied zip ties wrap spotlight, turn signals, and power wire to the lightbar.
7. Locate the 3 wire accessory lead inside the headlight housing. Connect the Black power wire from the lightbar switch to the Orange with Blue accessory wire using the supplied blue quick splice connector.
8. Reinstall the headlight with (2) Phillips screws removed in Step 1.
9. Check to make sure your handlebars turn from lock to lock without any stretching or binding in any of the wires. Check the alignment of all your lighting. Make sure everything is in proper working order before riding the vehicle.

**FIGURE 1**

**\* Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**