

## Items Supplied >

- 1 – Freeway Bar Assembly
- 4 – 5/16" x 3/4" Hex Bolts
- 4 – 5/16" Hex Nuts
- 4 – 5/16" Lock Washers
- 1 – M10 x 25mm Hex Bolt
- 1 – M10 Flat Washer
- 1 – M8 x 75mm Hex Bolt
- 1 – M8 Flat Washer

## Application >


HONDA SABRE 00-07

## Instruction Manual >


01-1135

Page 1 of 2

1. Drill the two existing holes in the left frame gusset using a 5/16" drill bit (see figure 1). Repeat this step on the right side of the motorcycle.

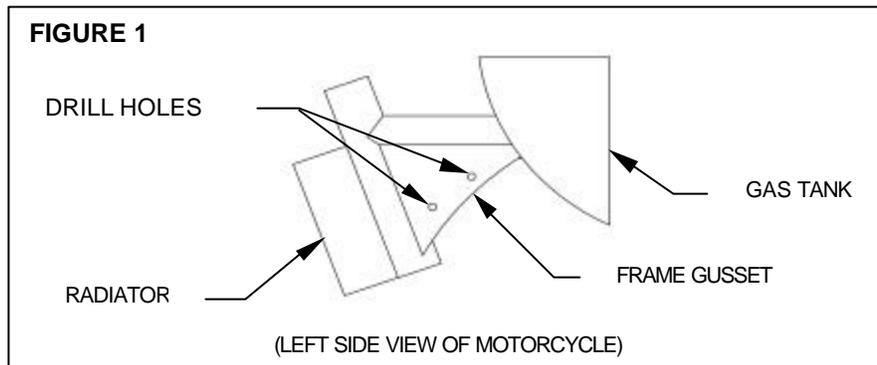


2. Remove the lower bolt from the left driver footpeg mount and set aside for reassembly (see figure 2).
3. Loosen the upper bolt and swing the left driver footpeg mount out of the way so the lower frame support bolt can be removed (see figure 2).

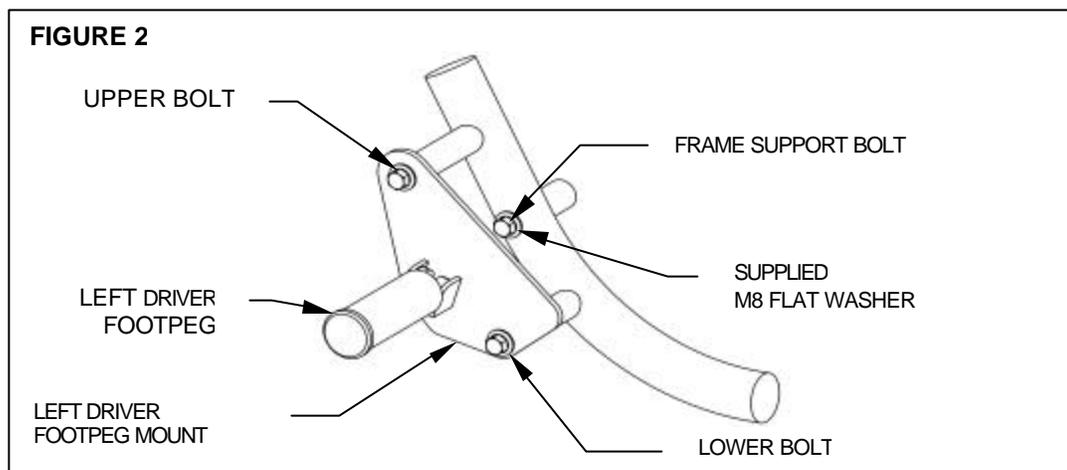

\* *Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

4. Remove the upper bolt from the drivers right footpeg mount (see figure 3).

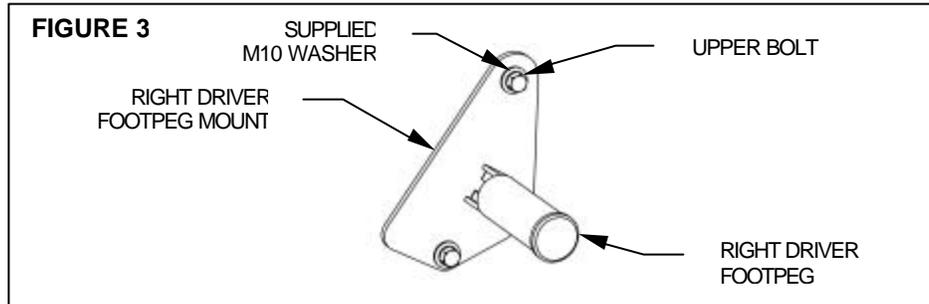

5. Align the freeway bar's top mounts with the holes drilled in the frame gussets. Then install the supplied 5/16" bolts through the freeway bar, gusset, supplied lock washers and finger tighten the nuts from the backside of the gusset.
6. Align the right lower freeway bar mount with the right driver footpeg mount upper bolt hole. Then install the supplied M10x25mm bolt through the supplied M10 flat washer, freeway bar and finger tighten into the right driver footpeg mount (see figure 3).
7. Align the left lower freeway bar mount with the frame support bolt hole. Install the supplied M8x75mm bolt through M8 flat washer, freeway bar and into the frame support (see figure 2). Torque the bolt to factory settings.
8. Reinstall the lower bolt, removed in step 2, into the left driver footpeg mount.
9. Torque all installed bolts and nuts to appropriate values.
10. Verify the rear brake lever does not contact the highway bar when the rear brake is applied. If contact is made adjust the rear brake rod (located between the lever and master cylinder). Also, verify the rear brake light works properly and adjust the rear brake switch if necessary.

**Cobra Freeway Bars add style to your motorcycle. They are not designed to withstand a serious impact and may not protect you and/or your motorcycle in the event of a crash.**