

Items Supplied >

- 1 – RIGHT SIDE CASE GUARD
- 1 – LEFT SIDE CASE GUARD
- 4 – M10-1.25 X 30mm HEX FLANGE BOLT
- 2 – M10-1.25 X 20mm BUTTONHEAD BOLT

Application(s) >

SUZUKI M-90R

2009

Instruction Manual >

01-3342

Page 1 of 1

Read all instructions carefully before installing your new Cobra product!

ATTENTION: ONLY INSTALL ONE CASE GUARD PER SIDE AT A TIME.

1. Remove the bolts securing the right side rider footpeg assembly; these bolts will not be used again.
2. Position the lower case guard bracket in between the footpeg mount and the frame. Then insert the two supplied M10 x 30mm hex bolts thru the footpeg mount, case guard bracket and begin threading into the frame until snug. **DO NOT TIGHTEN**. See diagram below.
3. To mount the upper case guard bracket to frame, locate and remove the small black thread plug on the frame tube. Insert the supplied M10 x 20mm buttonhead bolt through the upper bracket and thread into the frame where the plug was removed.
4. Torque all supplied bolts to factory specification.
5. Repeat Steps 1 - 4 on the left side.

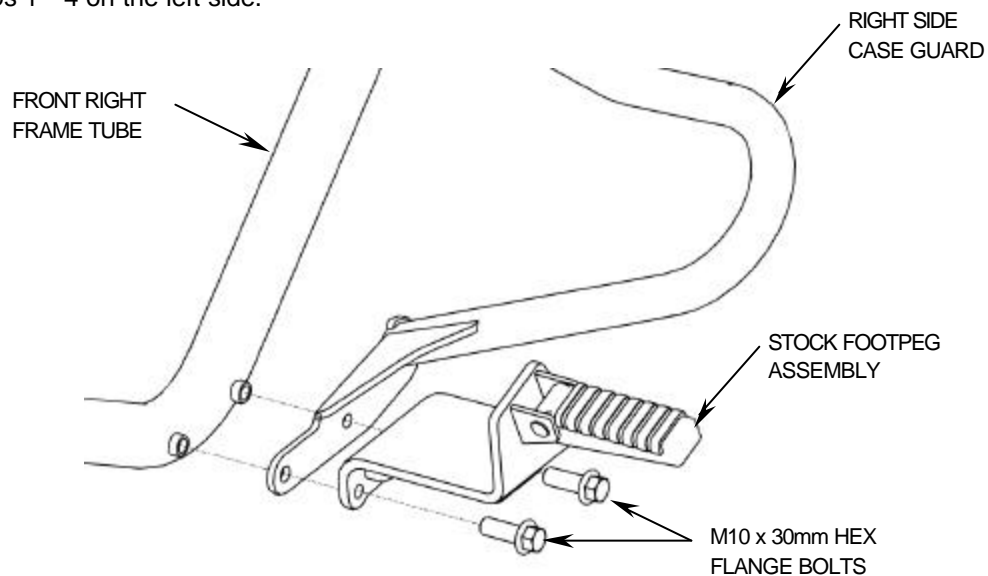


DIAGRAM MAY VARY FROM APPLICATION

** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*