

Items Supplied >

- 1 – FORMED RACK
- 2 – BOLT, M10 x 40mm BUTTONHEAD
- 2 – BOLT, M10 x 60mm BUTTONHEAD

Application(s) >

HONDA SHADOW RS

2010-2014

Instruction Manual >


02-4114

Page 1 of 1

Read all instructions carefully before installing your new Cobra® product!

Your formed rack will install in just a few minutes using common tools.

1. Remove and discard the (2) front M10 bolts from the left and right side fender rails. Save the plastic washers and steel bushings. NOTE: Do not remove all (4) fender bolts because fender may fall - resulting in possible scratches or damage to fender/paint.
2. Install the formed rack by inserting the (2) supplied M10 x 60mm bolts through the rack's front holes, steel bushings, plastic washers, chrome covers and into the frame. **DO NOT TIGHTEN AT THIS TIME.**
3. Remove and discard the (2) rear M10 bolts from the left and right side fender rails. Save the plastic washers and steel bushings.
4. Rotate the rack until the rear holes align, then insert the (2) supplied M10 x 40mm bolts through the rack's rear holes, steel bushings, plastic washers, chrome covers and into the frame.
5. Align the rack then torque all (4) M10 bolts to their appropriate values.

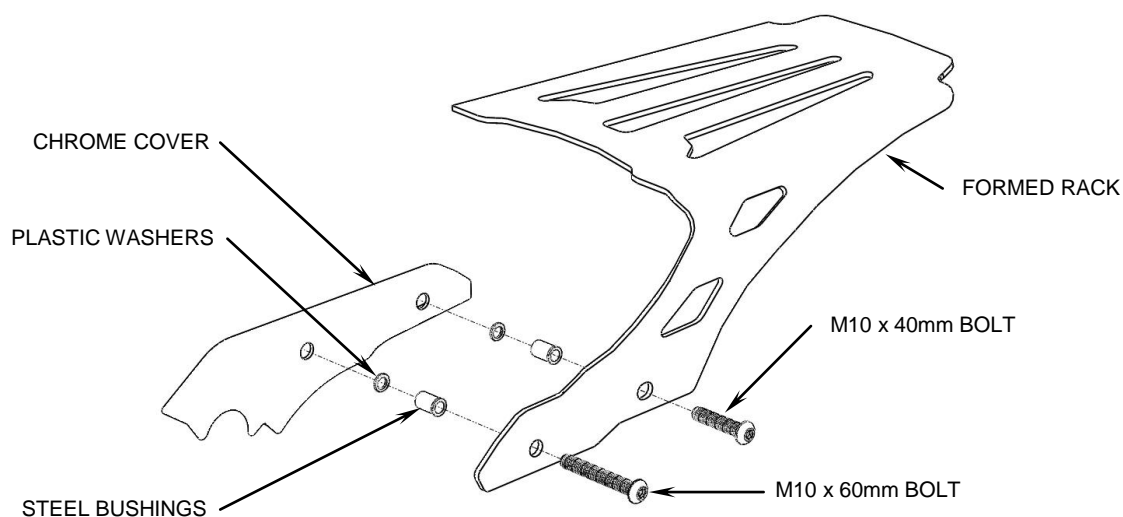

LEFT SIDE SHOWN

*** Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**