

## Items Supplied >

- 1 – Sissy Bar w/pad
- 2 – Frame Mount Bracket (Left / Right)
- 2 – Sissy Bar Mount Bracket (Left / Right)
- 2 – Spacer
- 2 – M8 x 20mm Flathead Allen Bolt
- 2 – M8 x 16mm Flathead Allen Bolt
- 4 – M8 x 20mm Buttonhead Bolt w/ Lock Patch
- 4 – M8 x 16mm Buttonhead Bolt

## Application(s) >

HONDA VT1300 CR                      2010-2015

## Instruction Manual >


02-4636 / 02-5136 / 02-5636

Page 1 of 2

### READ ALL INSTRUCTIONS CAREFULLY AND COMPLETELY BEFORE INSTALLING YOUR NEW SISSY BAR!

1. Remove the entire license plate / rear turn signal assembly by first removing the license plate. Then remove the (2) bolts securing the top chrome cover between the turn signals; the bolts are located on the underside of the bottom plastic cover. Disconnect the wire connectors for the license light, tail light and rear turnsignals Remove the (3) flange nuts securing the assembly to the fender subframe. Remove the assembly components leaving only the (3) studs exposed.
2. Pull to remove the battery/electrical covers from the both sides of the motorcycle.
3. Remove the seat by first removing the (1) bolt under the rear of the seat. Where the covers were removed in Step 2, locate and remove the (2) bolts securing the underside of the seat. Pull the seat back and up to remove.
4. Remove the (2) plastic fasteners that secure the front end of the rear fender. NOTE: Depress the center pin on the fasteners to release. Carefully remove the fender.
5. On the fender sub frame locate the threaded bungs (2 per side) and install the left and right frame mount brackets by inserting the (2) M8 X 20mm flathead allen bolts through the mount brackets, supplied spacers and into the frame in the front holes. Insert the (2) M8 x 16mm flathead allen bolts in the rear holes. Fully tighten the bolts. NOTE: The brackets will have an 'L' or 'R' indicating which is left and right. See Figure 1.
6. Reinstall the fender and secure with the two fasteners removed in Step 4. NOTE: To reinstall fasteners pull the center pin out; insert into holes then push the pin flush. Reinstall the license plate/rear turnsignal assembly in the reverse order of removal.
7. Install the sissy bar mount brackets onto the frame mount brackets using the (4) M8 x 20mm buttonhead bolts w/ lock patch. **Do not fully tighten bolts.** See Figure 1.
8. Install the sissy bar to the sissy bar mount brackets using the (4) M8 x 16mm buttonhead bolts. **Do not fully tighten bolts.** See Figure 1.
9. Align the sissy bar from side to side then fully tighten all remaining loose bolts.
10. Reinstall the seat in the reverse order of removal. Reinstall the battery/electrical covers.

\* *Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

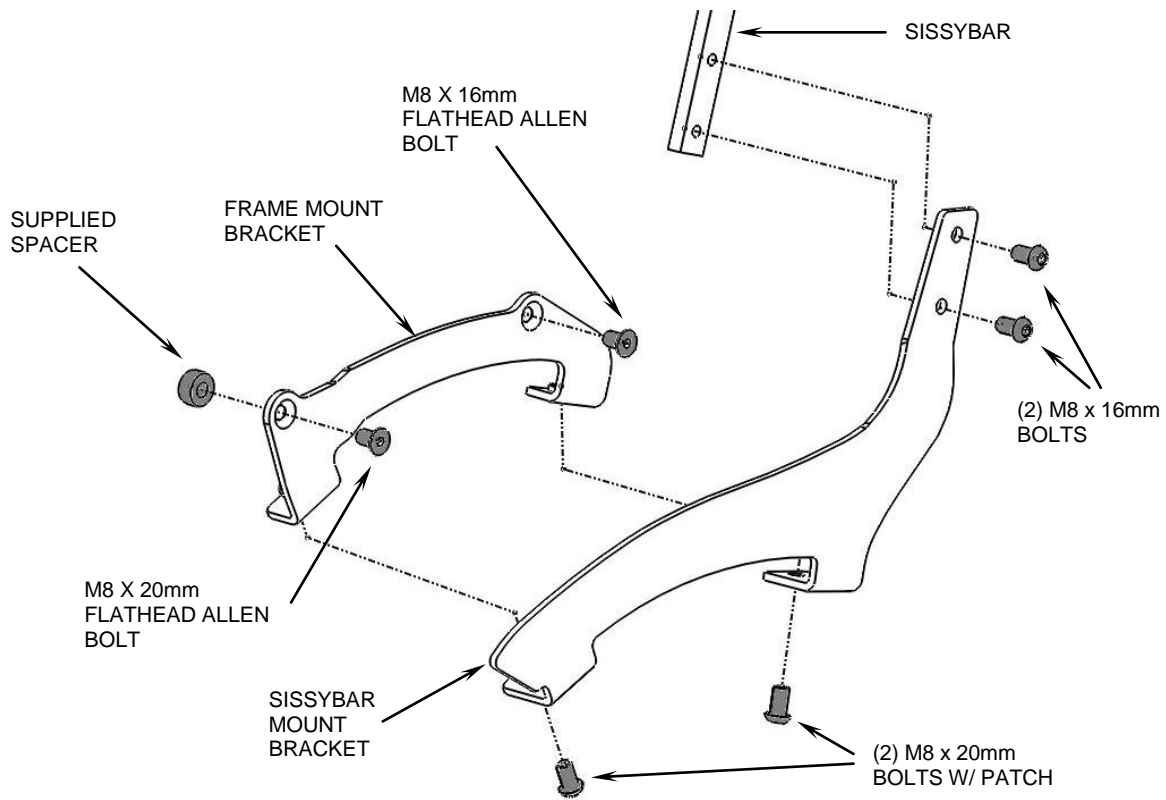

**FIGURE 1**  
LEFT SIDE SHOWN