

Items Supplied >

- 1 – Chrome Radiator Cover
- 2 – Screw, M6 X 35mm Buttonhead Stainless
- 2 – Spacer, Aluminum
- 1 - Double Sided Tape, (Installed on Chrome Radiator Cover)

Application(s) >

Honda VT1300 CR/CS/CT 2010 - 2014

Instruction Manual >

05-9334

Page 1 of 1

Read all instructions carefully before installing your new Cobra product!

1. Remove the (2) M6 Socket Head screws securing the stock radiator cover, these will not be reused.
2. **Clean** the top of the stock plastic radiator cover with rubbing alcohol to remove any oil or dirt that may be on the surface and prevent the double side adhesive tape from sticking, see Figure 1.
3. Remove the paper backing from the double sided tape that is on the inner side of the chrome radiator cover.
3. Position the new chrome radiator cover over the plastic radiator starting at the top and rotate the bottom into place. This will allow the double sided tape to position itself properly . One supplied spacer will be placed between the stock plastic cover and each hole in the chrome cover, Figure 2. Insert one M6 x 35mm buttonhead screw into chrome radiator cover, supplied spacer, stock plastic cover and threaded tab on frame, but do not tighten fully. Repeat this for each hole in the chrome cover, there is a total of two positions.
4. Align the radiator cover with the frame down tubes to the left and right side of it and tighten the screws to factory specifications firmly.

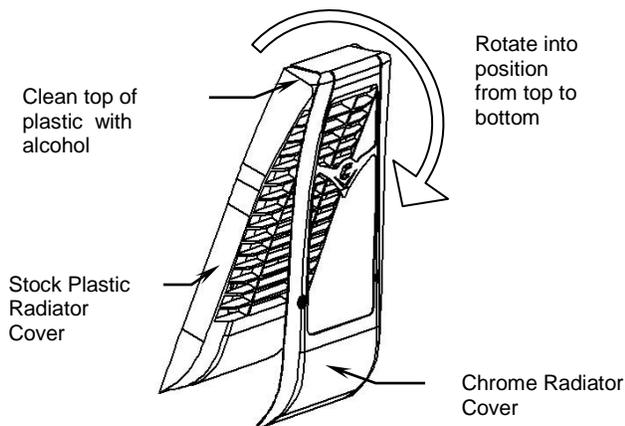


FIGURE 1

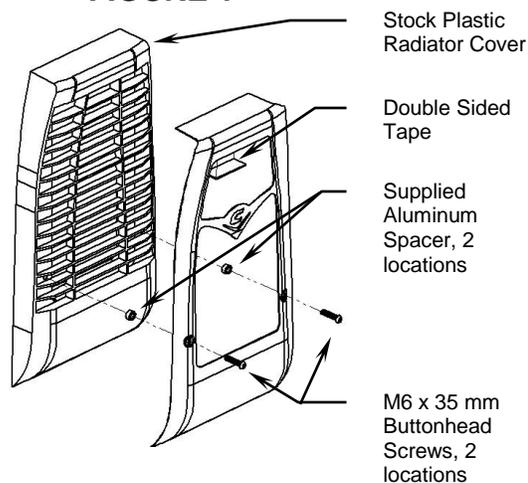


FIGURE 2

*** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**