

Items Supplied >

- 1 – Radiator Cover
- 4 – M6-1.0 x 10 mm BHCS

Application(s) >

Yamaha, V-Star 1300 2007 – 2010

Instruction Manual >

05-9347

Page 1 of 1

Read all instructions carefully before installing your new Cobra product!

1. Remove the (4) M6 screws that secure the plastic radiator cover to the radiator. Remove the cover.
2. Remove the rubber grommet from the lower center support of the stock plastic cover. Re-insert the stock grommet into the same location on the new chrome Cobra radiator cover, see Figure 1.

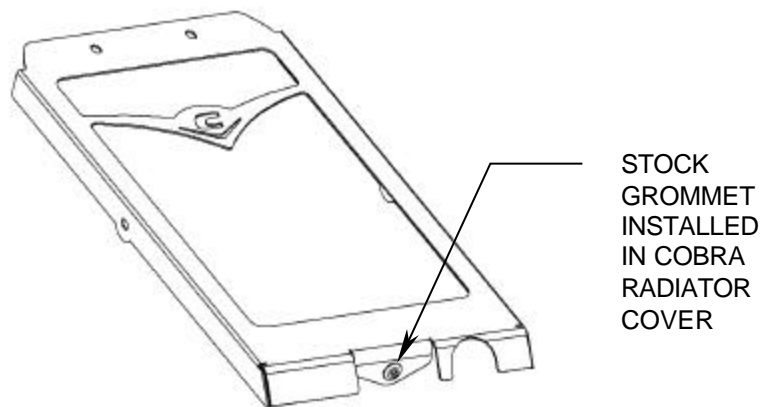


FIGURE 1

3. Slide the new cover over the radiator and insert the (4) supplied M6-1.0 x 10 mm Buttonhead screws into the radiator cover and into the radiator. Check for proper alignment and tighten the screws to factory specifications.

** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*