

## Items Supplied >

- 1 – Chrome Radiator Cover
- 4 – Screw, M6 X 20mm Buttonhead Stainless
- 4 – Spacer, Satin Black

## Application(s) >

Kawasaki VN900 2006 - 2019


## Instruction Manual >

05-9348

Page 1 of 1

**Read all instructions carefully before installing your new Cobra product!**

1. Remove the (4) M6 Phillips screws securing the stock radiator screen, note orientation of screen prior to removing it. The stock screws will not be reused.
2. Place the stock radiator screen with the original orientation with which it was mounted, inside of the supplied chrome radiator cover, refer to Figure 1 for clarification.
3. Position the screen and radiator cover over the radiator. One supplied spacer will be placed between the stock screen and the threaded mounting tabs on the radiator. Insert one M6 x 20mm buttonhead screw into chrome radiator cover, screen, spacer and threaded mounting tab on the radiator, but do not tighten fully. Repeat this for each hole in the chrome cover, there is a total of four positions.
4. Align the radiator cover with the frame down tubes to the left and right side of it and tighten the screws to factory specifications.

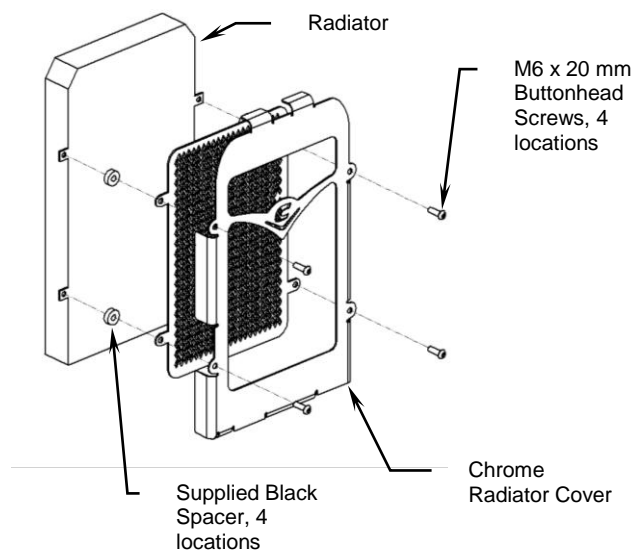

**FIGURE 1**

**NOTE:** If you have already installed a Cobra freeway bar, please remove it to allow installation of the radiator cover. Once you have installed the radiator cover reinstall the freeway bar and torque fasteners to factory specifications.

**\* Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**