



23801 E. La Palma Ave., Yorba Linda, Ca 92887 Ph. 714.692.8180 Fax. 714.692.5016

www.cobrausa.com

Items Supplied >

- 1 – CHROMED SWINGARM COVER
- 3 – DOUBLE SIDED TAPE PIECES PRE-APPLIED

Application(s) >

Honda Aero 750	04-16
Honda Spirit 750 C2	07-14
Honda Phantom 750	10-19

Instruction Manual >

06-0618

1. Thoroughly clean the outside of the swingarm with glass cleaner where the chrome cover will be attached.
2. Peel the backing off of the three sided high bond adhesive strip(s) and carefully place the swingarm cover into position on the swingarm, see Figure 1.
3. Press firmly on the swingarm cover for one minute.

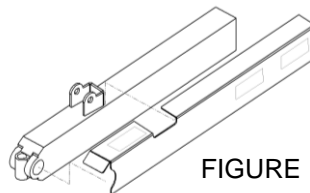


FIGURE 1.

Do not pull on the swingarm cover to check how well it is stuck. The high bond adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.

** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

DOCUMENT NO. 0019 REV. B
04/17

Anything's Possible®

Items Supplied >

- 1 – CHROMED SWINGARM COVER
- 3 – DOUBLE SIDED TAPE PIECES PRE-APPLIED

Application(s) >

Honda Aero 750	04-16
Honda Spirit 750 C2	07-14
Honda Phantom 750	10-19

Instruction Manual >

1. Thoroughly clean the outside of the swingarm with glass cleaner where the chrome cover will be attached.
2. Peel the backing off of the three sided high bond adhesive strip(s) and carefully place the swingarm cover into position on the swingarm, see Figure 1.
3. Press firmly on the swingarm cover for one minute.

Do not pull on the swingarm cover to check how well it is reaches full strength in 72 hours. Wait at least 24 hours before

*** Cobra recommends you always wear a helmet while riding. Please ne the influence of alcohol and/or drugs. Enjoy the new look of your mo**

06-0618


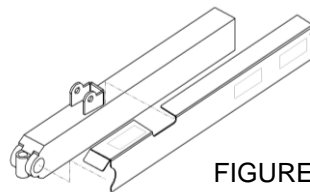


FIGURE 1.

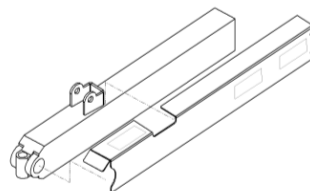

'e

ile under

ossible®