

## Items Supplied >

- 1 – DRIVESHAFT BOLTS COVER
- 1 – LOWER MOUNT BRACKET
- 1 – UPPER MOUNT BRACKET
- 1 – M6-1.0 X 12mm BUTTONHEAD BOLT
- 1 – M6-1.0 X 10mm BUTTONHEAD BOLT
- 2 – 3/8" FLAT WASHERS

## Application(s) >

SUZUKI M90

2009


## Instruction Manual >

06-0843 / 06-0844

Page 1 of 2


### Read all instructions carefully before installing your new Cobra product!

1. This cover works in conjunction with (or without) the Cobra Drive Shaft Cover (Part #06-0842). If this cover is already installed loosen hose clamp and slide the cover forward for clearance.
2. Remove the stock acorn nuts from the upper and lower drive shaft studs. Save the acorn nuts and stock washers for later use.
3. Install the (2) supplied 3/8 washers and then the lower mount bracket over the lower exposed stud. Place the stock washer over the bracket and install using the stock acorn nut, but **do not fully tighten**. Orient the bracket so the flat surface rests against the swing arm casting. See Figure 1.
4. Install supplied upper mount bracket over the upper exposed stud. Place the stock washer over the bracket and install using the stock acorn nut, but **do not fully tighten**. Orient the bracket so the locating tab rests against the driveshaft casting. See Figure 1 for final bracket positions.
5. Place bolts cover over the driveshaft and slide back over acorn nuts. The lower bracket must sit inside of cover while the upper bracket should rest on the outer backside of the cover, See Figure 2. Make sure the brackets align properly with no interference. If cover does not fit correctly repeat Steps 3 and 4. If the bolts cover slides on smoothly continue to Step 6.

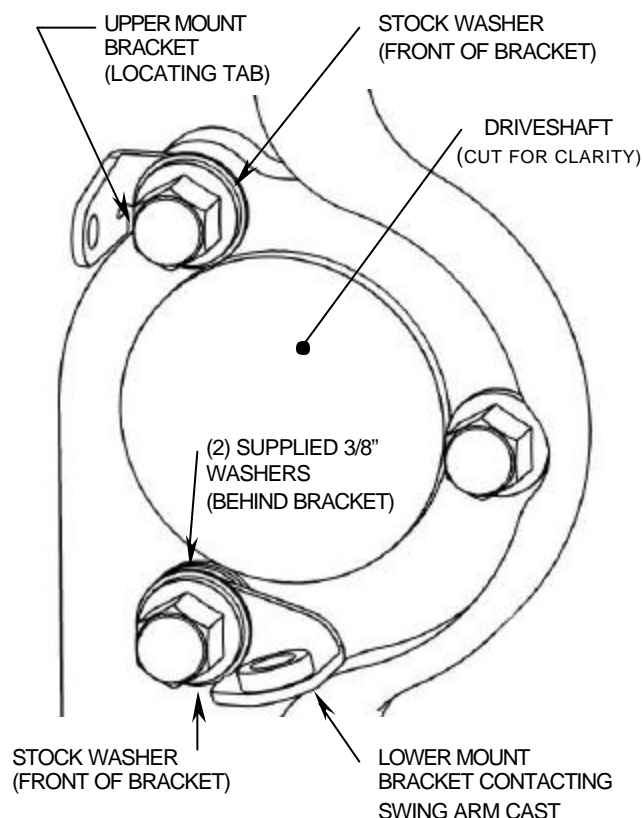**FIGURE 1**

\* Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.

6. Remove the bolts cover and tighten acorn nuts to factory specifications. *(For the upper mount bracket you will need to hold the bracket in position as you fully tighten the acorn nut to factory torque specifications, preventing the bracket from rotating.)*
7. If the Cobra Drive Shaft Cover (Part #06-0842) is installed, slide back into place towards the rear until it is bottomed out against the driveshaft casting. Rotate the driveshaft cover to proper position and tighten the hose clamp.
8. Place the bolts cover over the driveshaft as described in Step 5. Install the M6 x 12mm buttonhead bolt from the bottom of the bolts cover and into the lower bracket, but leave bolt loose. Install M6 x 10mm buttonhead bolt into the upper bracket and into the bolts cover, but leave bolt loose. See Figure 2.
9. Push bolts cover firmly toward swing arm housing and tighten the lower then upper buttonhead bolts firmly. Make sure bolts cover is properly seated into position. Periodically check tightness of all bolts, especially after a long ride.

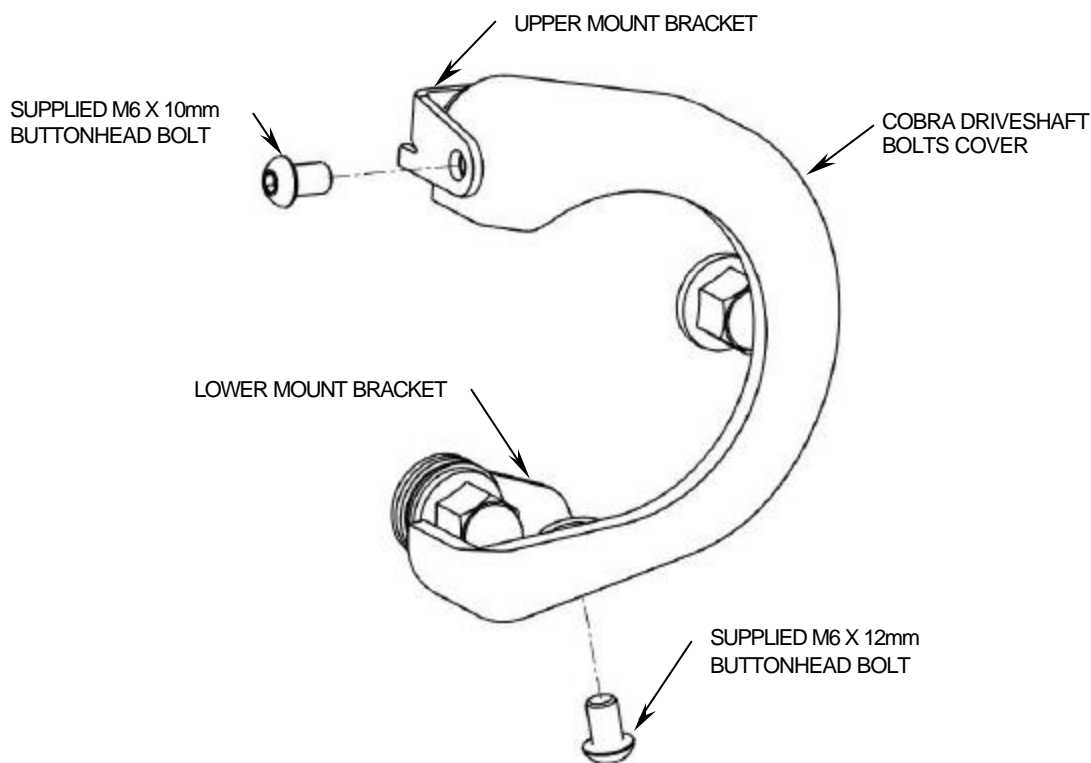

**FIGURE 2**  
(DRIVESHAFT AND  
SWINGARM NOT SHOWN)