

Items Supplied >

- 1 – FLOORBOARD ASSEMBLY, LEFT
- 1 – FLOORBOARD ASSEMBLY, RIGHT
- 1 – WASHER, FLAT M10
- 1 – BOLT, M10X45mm

Application(s) >

- | | |
|----------------|-------|
| Honda Aero 750 | 04-14 |
| Spirit 750 C2 | 07-14 |
| Phantom 750 | 10-14 |

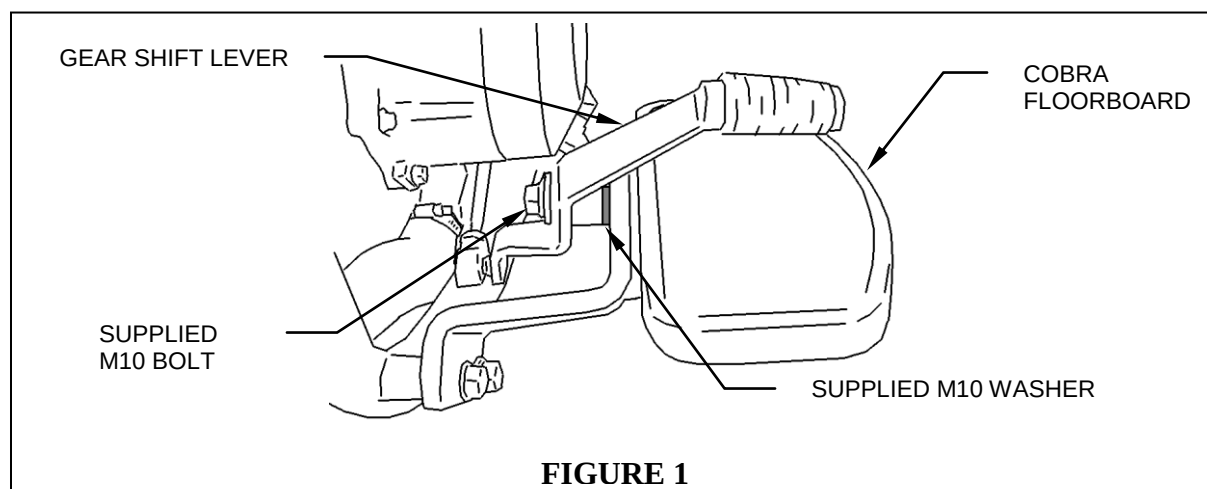
Instruction Manual >

06-1618 / 06-4118

Page 1 of 1

Your Floorboards will install in just a few minutes using common tools. Read all instructions carefully and completely before installation

1. Remove the M10 bolt from the shift lever on the left footpeg mount. Remove the two M10 bolts from the footpeg mount at the frame and remove the footpeg assembly. Set the bolts aside.
2. Install the left Cobra floorboard assembly to the frame with the M10 bolts set aside from step 1. Reinstall the shift lever with the supplied M10x45mm bolt and place the supplied flat washer between the shift lever and mount (see figure 1) and tighten.
3. Remove the two M10 bolts from the right side footpeg assembly at the frame and set the bolts aside.
4. Install the right side Cobra floorboard assembly with the two M10 bolts set aside from step 3.
5. Tighten all bolts to factory torque specifications.

**FIGURE 1**

*** Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**